

COOKER TOP MODEL 213/11

1. Instructions for use

Please read these instructions carefully prior to using the appliance. These instructions should be retained for future reference.

1. Important Safety Notice

- 1.1. This appliance complies with SABS 1539:2003
- 1.2. The appliance is rated for cylinder pressure – Butane / Propane Mixture (LPG)
- 1.3. This appliance can be used with any cylinder filled with LPG which is fitted with an internal or external valve which has a **vertical** 3/8 RH outlet.
- 1.4. Check that the sealing washer is in place and in good condition prior to connecting the appliance to the gas cylinder. The seal must be replaced if it is damaged or worn. Do not use the appliance without a sealing rubber washer
- 1.5. Keep all flammable material at least 600mm from the appliance.
- 1.6. When fitting the appliance to the cylinder do so away from any source of ignition or open flame.
- 1.7. Keep the appliance level during use.
- 1.8. Use the appliance in a well ventilated area.
- 1.9. Use soapy water to check for leaks, this should be done outside and away from possible sources of ignition. If the soapy mixture bubbles at a joint i.e. where appliance joins cylinder there is a leak, stop using the appliance immediately.
- 1.10. This appliance will get hot during use, keep children away from the appliance, do not leave the appliance unattended and do not touch the appliance with bare hands, you will get burnt.
- 1.11. Do not cover the air mixture holes partially or in full, this will impact the ability of the appliance to operate properly.
- 1.12. In the event of Burnback, **where the flame burns back to the jet**, the appliance must be switched off immediately. **Wait 2 - 3 minutes and relight the appliance in the normal manner. If the burnback occurs again call a service technician to examine the appliance and do not use it until it has been declared safe to do so.**
- 1.13. Maximum pot diameter may not exceed 300mm

2. Assembling and Operating the appliance.

- 2.1. Check that there is a rubber washer, and ensure that it is in good condition.
- 2.2. Screw the appliance into the valve outlet; do not cross thread as you will damage the valve or appliance.
- 2.3. Carry out a leak test as described in 1.9 above.
- 2.4. Never attempt to replace a cylinder while the appliance is in operation.
- 2.5. Do not attempt to light the appliance if you suspect a gas leak.
- 2.6. Ensure that the cylinder is on a level solid surface before attempting to light the appliance.
- 2.7. Once the appliance is alight the flame height should be adjusted by controlling the flow of gas through the valve.
- 2.8. Do not attempt to touch the appliance once in operation and allow to cool after use prior to packing away.

3. Maintenance and Cleaning

- 3.1. Do not use a pin or other sharp object to clean a jet, doing so may result in a changed jet diameter which will result in changed performance of the appliance.
- 3.2. Remove the burner head from the appliance and unscrew the jet, replace the jet using a standard primus jet nipple.
- 3.3. The entire appliance can be stripped and washed with normal household detergent, ensure that the components are clean and free of moisture before re-assembly wet components may result in jet blockages and or poor performance of the appliance.

4. Storage

The appliance is best kept on a cylinder or in its original packaging.

Should you have any enquiries about your new appliance please contact the agents in South Africa on 021 5772510 or dale@pressureconcepts.com

Distributor:
LK Products
info@lks.co.za

COOKER TOP MODEL 213/11

1. Instructions for use

Please read these instructions carefully prior to using the appliance. These instructions should be retained for future reference.

1. Important Safety Notice

- 1.1. This appliance complies with SABS 1539:2003
- 1.2. The appliance is rated for cylinder pressure – Butane / Propane Mixture (LPG)
- 1.3. This appliance can be used with any cylinder filled with LPG which is fitted with an internal or external valve which has a **vertical** 3/8 RH outlet.
- 1.4. Check that the sealing washer is in place and in good condition prior to connecting the appliance to the gas cylinder. The seal must be replaced if it is damaged or worn. Do not use the appliance without a sealing rubber washer
- 1.5. Keep all flammable material at least 600mm from the appliance.
- 1.6. When fitting the appliance to the cylinder do so away from any source of ignition or open flame.
- 1.7. Keep the appliance level during use.
- 1.8. Use the appliance in a well ventilated area.
- 1.9. Use soapy water to check for leaks, this should be done outside and away from possible sources of ignition. If the soapy mixture bubbles at a joint i.e. where appliance joins cylinder there is a leak, stop using the appliance immediately.
- 1.10. This appliance will get hot during use, keep children away from the appliance, do not leave the appliance unattended and do not touch the appliance with bare hands, you will get burnt.
- 1.11. Do not cover the air mixture holes partially or in full, this will impact the ability of the appliance to operate properly.
- 1.12. In the event of Burnback, **where the flame burns back to the jet**, the appliance must be switched off immediately. **Wait 2 - 3 minutes and relight the appliance in the normal manner. If the burnback occurs again call a service technician to examine the appliance and do not use it until it has been declared safe to do so.**
- 1.13. Maximum pot diameter may not exceed 300mm

2. Assembling and Operating the appliance.

- 2.1. Check that there is a rubber washer, and ensure that it is in good condition.
- 2.2. Screw the appliance into the valve outlet; do not cross thread as you will damage the valve or appliance.
- 2.3. Carry out a leak test as described in 1.9 above.
- 2.4. Never attempt to replace a cylinder while the appliance is in operation.
- 2.5. Do not attempt to light the appliance if you suspect a gas leak.
- 2.6. Ensure that the cylinder is on a level solid surface before attempting to light the appliance.
- 2.7. Once the appliance is alight the flame height should be adjusted by controlling the flow of gas through the valve.
- 2.8. Do not attempt to touch the appliance once in operation and allow to cool after use prior to packing away.

3. Maintenance and Cleaning

- 3.1. Do not use a pin or other sharp object to clean a jet, doing so may result in a changed jet diameter which will result in changed performance of the appliance.
- 3.2. Remove the burner head from the appliance and unscrew the jet, replace the jet using a standard primus jet nipple.
- 3.3. The entire appliance can be stripped and washed with normal household detergent, ensure that the components are clean and free of moisture before re-assembly wet components may result in jet blockages and or poor performance of the appliance.

4. Storage

The appliance is best kept on a cylinder or in its original packaging.

Should you have any enquiries about your new appliance please contact the agents in South Africa on 021 5772510 or dale@pressureconcepts.com

Distributor:
LK Products
info@lks.co.za